

<i>Blitz Modell</i>	Kompatibilitätsliste DÖRR TTL Blitzgeräte DAF-42, DAF-34, CombiFlash
Canon	<p>Canon DSLR Kameras 5D, 10D, 20D, 30D, 300D, 350D, 400D, 40D, 450D, 1000D, 50D, 5D, 7D, Mark II, 1D Mark III, 500D</p> <p>Canon Compact Digicams G1, G2, G3, G5, G6, PRO 1, G7, G9, S5 IS, G10, G11, SX10 IS, SX1 IS, SX20 IS</p>
Nikon	<p>Nikon DSLR Kameras D3, D3X, D300, D200, D80, D70, D70s, D50, D40, D40x, D60, D700, D90, D5000, D300S, D3000</p> <p>Fujifilm DSLR Kameras FinePix S5 Pro / FinePix IS Pro</p> <p>Nikon Compact Digicams Coolpix 4500, Coolpix 5000, Coolpix 5400, Coolpix 5700, Coolpix 8400, Coolpix 8700, Coolpix 8800, Coolpix P5000, Coolpix P6000</p>
Oly/Pana	<p>Olympus DSLR Kameras E-1, E 3, E-300, E-330, E-410, E-500, E-510, E-520, E-420, E-620, E-30, E-P1</p> <p>Panasonic DSLR Kameras DMC-L10, DMC-L1, DMC-FZ50, DMC-LX3, DMC-G1, DMC-GH1</p> <p>Olympus Compact Digicams C-750UZ, C-770UZ, C-7070WZ, C-5000Z, C-5050Z, C-5060Z, C-8080WZ</p> <p>Panasonic Compact Digicams DMC-L10, DMC-L1, DMC-FZ50, DMC-LX3, DMC-G1, DMC-GH1, DMC-GF1</p>
Pentax/ Samsung	<p>Pentax DSLR Kameras *ist D, *ist DL, *ist DL2, *ist DS, *ist DS2, K100D, K100D Super, K110D, K10D, K200D, K20D, K-m, K7, KX</p> <p>Samsung DSLR Kameras Samsung GX-1S, GX-1L, GX-10</p>
Sony	<p>Sony α DSLR Kameras A100, A200, A300, A350, A700, A900, A330, A380, A550, A850</p> <p>Konica Minolta Dynax 7D, Dynax 5D</p> <p>Sony Compact Digital Kameras DSC-R1, DSC-V1, DSC-V3, DSC-828, DSC-F505V, DSC-F707, DSC-F717, DSC-S70, DSC-S75, DSC-S85, MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD400, MVC-CD500, MVC-CD1000, MVC-FD90, MVC-FD92, MVC-FD95, MVC-FD97</p> <p>Konica Minolta Compact Digicams DiMAGE A1, DiMAGE A2, DiMAGE A200, DiMAGE Z2, DiMAGE Z5</p>